



Part No	Description
01	Motor Pedestal
02	Coupling (Complete)
02E	Coupling Element
02.1	Motor Coupling
02.2	Pump Coupling
03	Thrust Bearing Housing
04	Bearing Pedestal
05	Thrust Bearing 5314 J C3
06	Lock-Nut & Washer
07	Bearing Retaining Ring
08	Snap Ring Dia 82 ext.
11	Shaft
12	Upper Column
12.1	Middle Column
13.1	Lower Column - Top
13.2	Lower Column - Bottom
14	Lower Bearing NU 2217EW C3
15	Suction Inlet
16	Casing
17	Impeller
18	Flinger
19	Seal Ring
20	Gland Packing
24	Bearing Cartridge Assembly
25	Shaft Sleeve
27	Casing Insert
28	Lower Bearing Spacer
29	Lower Bearing Housing
31	Gland Follower
33	Agitator or Lock Nut
37	Suction Bell Housing
38	Sole Plate
39	Discharge Pipe
Fastners	
F1	Bolt: Motor to Motor Pedestal
F2	Bolt: Thrust Brg Housing to Brg Pedestal
F3	Bolt & Nut: Motor Pedestal to Upper Column
F4	Bolt & Nut: Upper Column to Middle Column
F5	Bolt: Lower Column to Casing
F6	Bolt: Casing to Suction Inlet
F7	Cap Screw: Inducer to Shaft
F8	Bolt: Gland Follower to Middle Column
F9	Bolt & Nut : Middle Column to Lower Column Top
F10	Bolt & Nut: Lower Column to Sole Plate
F11	Bolt & Nut: Lower Column Top to Bottom
F12	Bolt: Suction Inlet to Bell Housing
F13	Bolt & Nut: Sole Plate to Pipe

